

Safety Relay Unit G9SE Series

Compact and Simple Safety Control



- » Simple wiring using Push-In Plus terminal block
- » Slim design to save mounting space
- » Easy maintenance with status indicators

Compact and easy-to-install units with safety outputs

Helps increase your productivity, from installation to maintenance

Omron's new G9SE series of safety relay units offers an easy approach for various simple safety applications. The G9SE saves mounting space, lowers installation cost with Push-In Plus terminal block, and reduces operational cost with intuitive diagnostic indicators.

Slim design to save mounting space

The slim design of only 17.5 or 22.5 mm saves space in the control panel.



[Applicable safety standards]
EN ISO 13849-1: PLe/Safety Category 4
IEC 62061: SIL3
EN81-1/-2/-20/50



22.5 mm 17.5 mm

G9SE Series

nance



For various safety input devices

A wide variety of safety input devices such as emergency stop switches, door switches, and light curtains can be connected.

OFF-delayed safety output models are also available.

2 safety outputs
G9SE-201



4 safety outputs
G9SE-401



2 safety outputs with OFF-delay
G9SE-221-T05/T30



Simple wiring using Push-In Plus terminal block

Easy and reliable installation and maintenance

When the conventional model with terminals on the top and bottom of the unit is installed in a small control panel, it is difficult to secure sufficient space for wiring. The Push-In Plus terminal block on the front of the G9SE make installation easier and much quicker.

Conventional Models

Terminal No.

- Difficult to use the screwdriver for wiring to rear terminals
- Difficult to distinguish rear terminals due to showing their numbers on the front of the unit

G9SE

- No tool required. Just insert the ferrules to complete wiring.
- Easy wiring with terminals on the front of the unit.
- Easy to find terminal names.
- Eliminates loose screws.
- Fast Push-In Plus terminal block connections.

Save
50%
of installation time

- No tool required for wiring. Just insert the ferrule.
- Insert a flat-blade screwdriver, and remove the ferrule.

Faster troubleshooting with status indicators

The indicators of conventional safety relay units only indicate the operating status of the internal relays (K1/K2), and it is difficult to check the operation or connection of safety input devices. The new intuitive LED indicators of the G9SE show the operating status of safety inputs and outputs, enabling faster and more accurate troubleshooting when the equipment stops.

| | Safety door opened | Safety door closed | Restart switch ON | | | | | | | | | | | | | | | | | | |
|----------------------------|--|--|---|----|-------------------------|----|-------------------------|---|-----|----|----|----|----|-----|---|-----|----|----|-----|----|----|
| Conventional Models |  |  |  | | | | | | | | | | | | | | | | | | |
| G9SE |  <table border="1"> <tr><td>PWR</td><td>Power status</td></tr> <tr><td>K1</td><td>Internal relay 1 status</td></tr> <tr><td>K2</td><td>Internal relay 2 status</td></tr> </table> | PWR | Power status | K1 | Internal relay 1 status | K2 | Internal relay 2 status |  <table border="1"> <tr><td>PWR</td><td>ON</td></tr> <tr><td>K1</td><td>ON</td></tr> <tr><td>K2</td><td>OFF</td></tr> </table> | PWR | ON | K1 | ON | K2 | OFF |  <table border="1"> <tr><td>PWR</td><td>ON</td></tr> <tr><td>K1</td><td>OFF</td></tr> <tr><td>K2</td><td>ON</td></tr> </table> | PWR | ON | K1 | OFF | K2 | ON |
| PWR | Power status | | | | | | | | | | | | | | | | | | | | |
| K1 | Internal relay 1 status | | | | | | | | | | | | | | | | | | | | |
| K2 | Internal relay 2 status | | | | | | | | | | | | | | | | | | | | |
| PWR | ON | | | | | | | | | | | | | | | | | | | | |
| K1 | ON | | | | | | | | | | | | | | | | | | | | |
| K2 | OFF | | | | | | | | | | | | | | | | | | | | |
| PWR | ON | | | | | | | | | | | | | | | | | | | | |
| K1 | OFF | | | | | | | | | | | | | | | | | | | | |
| K2 | ON | | | | | | | | | | | | | | | | | | | | |

When the G9SE detects an error, such as input wiring, an indicator will blink to show where the error has occurred. This minimizes downtime to identify the cause when the equipment stops.



| Input Error | Output Error | Setting Error |
|--|--|--|
|  <p>Short circuit between safety inputs</p> |  <p>Fault of internal relay</p> |  <p>OFF-delay setting error</p> |

Applications

Molding machine



Safety circuit for machine

Safety relay unit
G9SE



Door position and open/close detection

Safety limit switch
D4B-□N
Small safety limit switch
D4N/D4F



Emergency stop for machine

Emergency stop switch
A22NE-P



Machine tool



Safety circuit for machine

Safety relay unit
G9SE



Door open/close detection

Guard lock safety-door switch
D4SL-N



Emergency stop for machine

Emergency stop switch
A22NE-P



Shrink-wrap machine



Safety circuit for machine

Safety relay unit
G9SE



Detecting entry

Safety light curtain
F3SG-R series
F3SJ series



Emergency stop for machine

Emergency stop switch
A22NE-P



Elevator/escalator



Safety circuit for machine

Safety relay unit
G9SE



Door position and open/close detection

Safety limit switch
D4B-□N
Small safety limit switch
D4N/D4F



Emergency stop for machine

Emergency stop switch
A22NE-P



Safety Relay Unit G9SE

Complete line-up of compact units,
including OFF-delayed safety output
models



Model Number Structure

Model Number Legend

G9SE - -
(1) (2) (3) (4) (5)

(1) Function

None: Emergency stop

(4) Auxiliary Output Configuration

1: PNP output

**(2) Safety Output Configuration
(Instantaneous Outputs)**

2: DPST-NO

4: 4PST-NO

(5) Max. OFF-delay Time

None:

T05: 5 seconds

T30: 30 seconds

**(3) Safety Output Configuration
(OFF-delayed Output)**

0: None

2: DPST-NO

Ordering Information

| Safety outputs | | Auxiliary outputs *3 | Max. OFF-delay time *1 | Rated voltage | Model |
|----------------|----------------|----------------------|------------------------|---------------|--------------|
| Instantaneous | OFF-delayed *2 | | | | |
| DPST-NO | — | 1 (Solid-state) | — | 24 VDC | G9SE-201 |
| 4PST-NO | | | | | G9SE-401 |
| DPST-NO | DPST-NO | | 5 s | | G9SE-221-T05 |
| DPST-NO | DPST-NO | | 30 s | | G9SE-221-T30 |

*1 The OFF-delay time can be set in 16 steps as follows:

T05: 0/0.1/0.2/0.3/0.4/0.5/0.6/0.7/0.8/1/1.5/2/2.5/3/4/5 s

T30: 0/1/2/4/5/6/7/8/9/10/12/14/16/20/25/30 s

*2 The OFF-delayed output becomes an instantaneous output by setting the OFF-delay time to 0 s.

*3 PNP transistor output

Specifications

Ratings

Power Input

| Item | Model | G9SE-201 | G9SE-401 | G9SE-221-T□ |
|----------------------------|-------|----------|-------------------------------------|-------------|
| Rated supply voltage | | | 24 VDC | |
| Operating voltage range | | | -15% to 10% of rated supply voltage | |
| Rated power consumption *1 | | 3 W max. | | 4 W max. |

Outputs

| Item | Model | G9SE-201 | G9SE-401 | G9SE-221-T□ |
|--|-------|----------|---|-------------|
| Safety output OFF-delayed Safety output | | | Contact output 250 VAC 5 A 30 VDC 5 A (resistive load) | |
| Auxiliary output | | | PNP transistor output Load current: 100 mA DC max. | |

Characteristics

| Item | Model | G9SE-201 | G9SE-401 | G9SE-221-T□ |
|---------------------------------------|--|---|---|---|
| Operating time (OFF to ON state) *2 | | | 100 ms Max. *3 | |
| Response time (ON to OFF state) *4 | | | 15 ms Max. | |
| Accuracy of OFF-delay time | | — | | Within plus or minus 10% of the set value |
| Inputs | Input current | | 5 mA Min. | |
| | ON voltage | | 11 VDC Min. | |
| | OFF voltage | | 5 VDC Max. | |
| | OFF current | | 1 mA Max. | |
| | Maximum cable length | | 100 m Max. | |
| | Reset input time | | 250 ms Min. | |
| Contact outputs | Contact resistance *5 | | 100 mΩ | |
| | Mechanical durability | | 5,000,000 operations Min. | |
| | Electrical durability | | 50,000 operations Min. | |
| | Switching specification Inductive load (IEC/EN60947-5-1) | | AC15: 240 VAC 2 A DC13: 24 VDC 1.5 A | |
| | Minimum applicable load | | 24 VDC 4 mA | |
| | Conditional short-circuit current (IEC/EN60947-5-1) | | 100 A *6 | |
| | Pollution degree | | 2 | |
| Over voltage category (IEC/EN60664-1) | | Safety output: Class III, the others: Class II | | |
| Insulation specification | Isolation voltage (Ui) | | 250 VAC | |
| | Impulse withstand voltage (IEC/EN60947-5-1) | Between input and output | 6 kV | |
| | | Between different poles of output | 6 kV (between 13-14/23-24 and 33-34/43-44 (37-38/47-48)) 4 kV (between 13-14 and 23-24, between 33-34 (37-38) and 43-44 (47-48)) | |
| | Dielectric strength | Between input and output | 2,200 VDC | |
| | | Between different poles of output | 1,500 VAC | |
| | Insulation resistance | | 100 MΩ | |
| Vibration resistance *7 | | Frequency:10 to 55 to 10 Hz Amplitude:0.35 mm half amplitude (0.7 mm double amplitude) | | |
| Mechanical shock resistance *7 | Destruction | | 300 m/s ² | |
| | Malfunction | | 100 m/s ² | |
| Surrounding Air Temperature | | -10 to 55°C (No freezing or condensation) | | |
| Ambient humidity | | 25% to 85%RH | | |
| Degree of protection | | IP20 | | |
| Weight | | approx. 150 g | approx. 180 g | |

*1 Power consumption of loads not included.

*2 The operating time is the time it takes for the safety contact to close after the safety inputs and feedback-reset input are turned ON. Not includes bounce time.

*3 This is in normal operation. When executing non-regular self-diagnosis for Safety output circuit, G9SE operating time become 500 ms max..

*4 The response time is the time it takes for the safety main contact to open after the safety input is turned OFF. Includes bouncetime.




*5 This is initial value using the voltage-drop method with 1A at 5VDC.

*6 Use for each contact output an 8A fuse that conforms to IEC 60127 as a short-circuit protection device. This fuse is not included with the G9SE.






*7 Condition: G9SE is mounted to mounting surface with screw and the screw mounting attachment. In the case of DIN rail mounting, mount DIN rail with G9SE to the place without big vibration. (Amplitude guideline: Less than 0.15 mm half amplitude (0.3 mm double amplitude))

Connection

Internal Connection

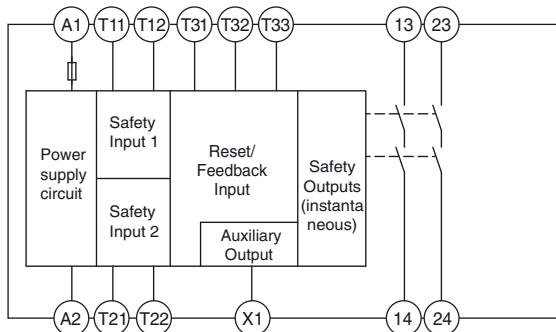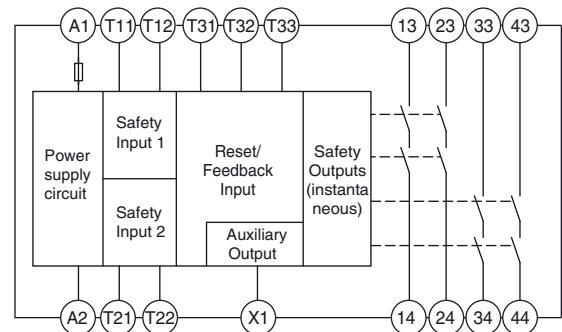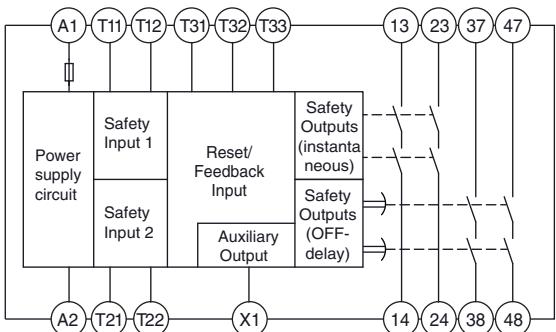G9SE-201**G9SE-401****G9SE-221-T□**

Wiring of inputs and outputs
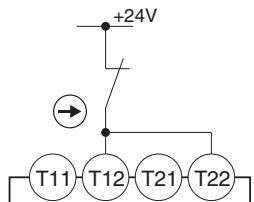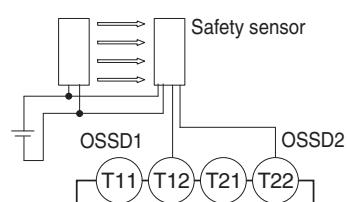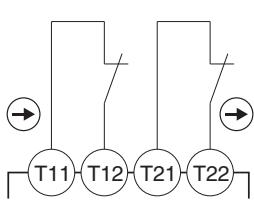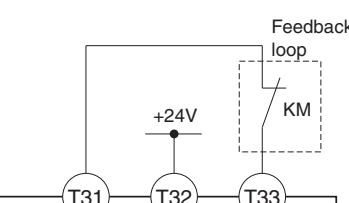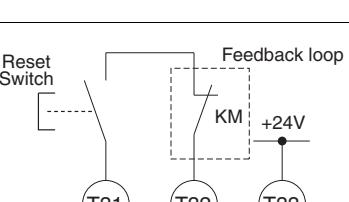
| Signal Name | Terminal Name | Description of operation | Wiring | |
|---------------------------|----------------------------|---|--|---|
| Power supply input | A1, A2 | The input terminals for power supply. Connect the power source to the A1 and A2 terminals. | Connect the power supply plus to the A1 terminal. Connect the power supply minus to the A2 terminal. | |
| Safety input 1 | T11, T12 | To set Safety outputs in ON state, HIGH state signals must be input to both of Safety input 1 and Safety input 2. Otherwise Safety outputs cannot be in ON state. | 1-channel Safety input |  |
| | | | 2-channel Safety input |  |
| Safety input 2 | T21, T22 | | |  |
| Reset/Feedback input | T31, T32, T33 | To set Safety outputs in ON state, ON state signal must be input to T33. Otherwise Safety outputs cannot be in ON state. *1 | Auto reset |  |
| | | To set Safety outputs in ON state, the signal input to T32 must change from OFF state to ON state, and then to OFF state. Otherwise Safety outputs cannot be in ON state. | Manual reset |  |
| Safety output | 13-14, 23-24, 33-34, 43-44 | Turns ON/OFF according to the state of safety inputs, Feedback/Reset inputs. During off-delayed state, safety outputs are not able to turn ON. | Keep these outputs Open when NOT used. | |
| Off-delayed Safety output | 37-38, 47-48 | Off-delayed safety outputs. *2 Off-delay time is set by off-delay preset switch. When the delay time is set to zero, these outputs can be used as non-delay outputs. | | |
| Auxiliary output | X1 | Outputs a signal of the same logic as Safety outputs | | |


*1 Construct the safety system taking into account that in the Auto reset mode Safety outputs turn ON automatically when Safety inputs 1 and 2 turn ON.

*2 When the inputs of G9SE-221-T□ are restored during off-delay time, G9SE-221-T□ will operate as below. Depending on the reset mode.

- Auto reset mode: Outputs turn off after off-delay time, then immediately turns on.
- Manual reset mode: Outputs turn off after off-delay time, then turn on when reset input is given.


Appearance and Explanation of Each Parts

Type G9SE-201 Type G9SE-201 Type G9SE-201□

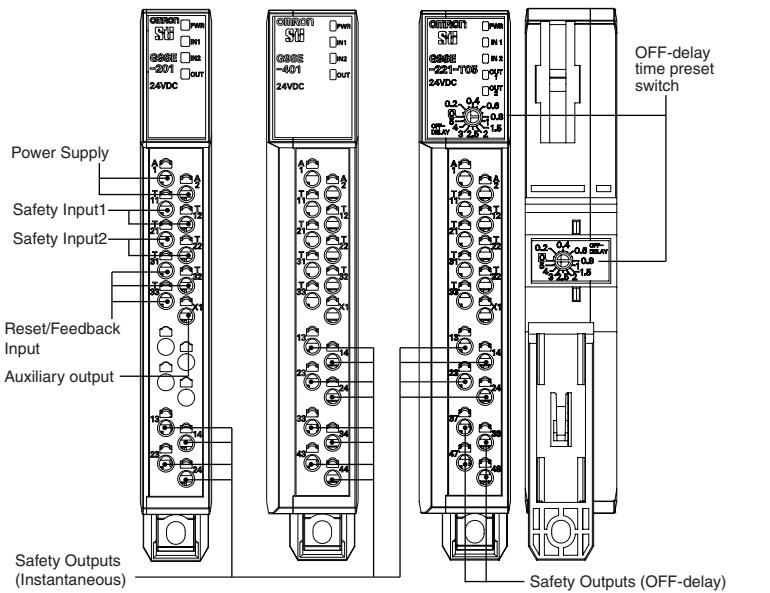

Dimensions and Terminal arrangement

(Unit: mm)

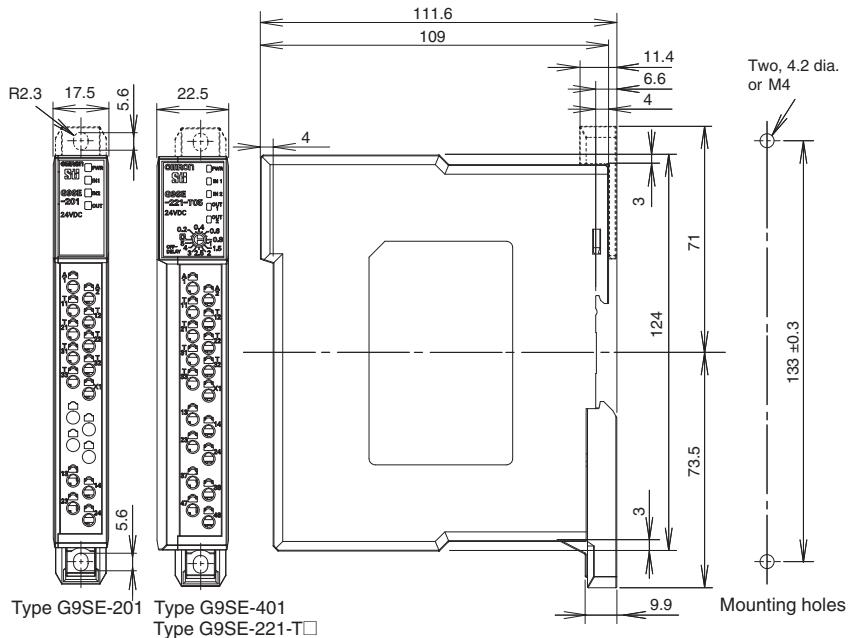

Terminal arrangement and LED indicators

The diagram shows the pinout for three G9SE series modules. Each module has a top header with four pins: PWR, IN1, IN2, and OUT. The bottom header contains 16 numbered pins arranged in four columns of four. The pin numbers are: A1, A2, (11), (12), (21), (22), (31), (32), (33), (34), (13), (14), (23), (24), (33), (34), (43), (44).


Application Examples

| Highest achievable PL/safety category | Model | Stop category | Reset |
|---------------------------------------|---|---------------|--------|
| PLe/4 equivalent | Emergency Stop Pushbutton A22NE-P Safety Relay Unit G9SE-201 | 0 | Manual |


Note: The above PL is only the evaluation result of the example. The PL must be evaluated in an actual application by the customer after confirming the usage conditions.

● Application Overview


- Immediately removes power to motor M when emergency stop switch S1 is pressed.
- The power to motor M is kept removed until emergency stop switch S1 is released and reset switch S2 is pressed.

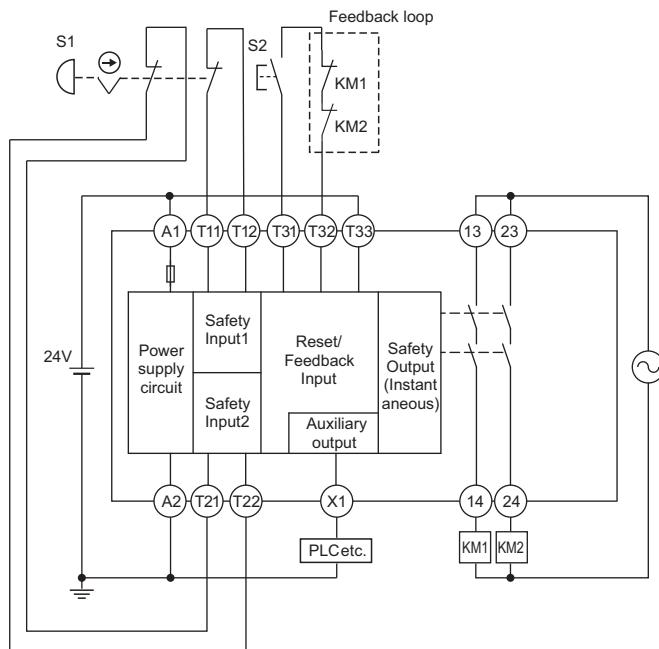

Timing Chart

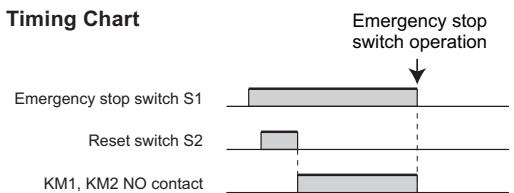

 S1: Emergency stop switch
 S2: Reset switch
 KM1, KM2: Magnetic contactor
 M: Motor




| Highest achievable PL/safety category | Model | Stop category | Reset |
|---------------------------------------|---|---------------|-------|
| PLe/4 equivalent | Safety Light Curtain F3SJ-A/-B/-E Safety Relay Unit G9SE-401 | 0 | Auto |


Note: The above PL is only the evaluation result of the example. The PL must be evaluated in an actual application by the customer after confirming the usage conditions.

● Application Overview


- Power supply to the motor M is turned OFF when blocked.
- Power supply to the motor M is kept OFF until unblocked.

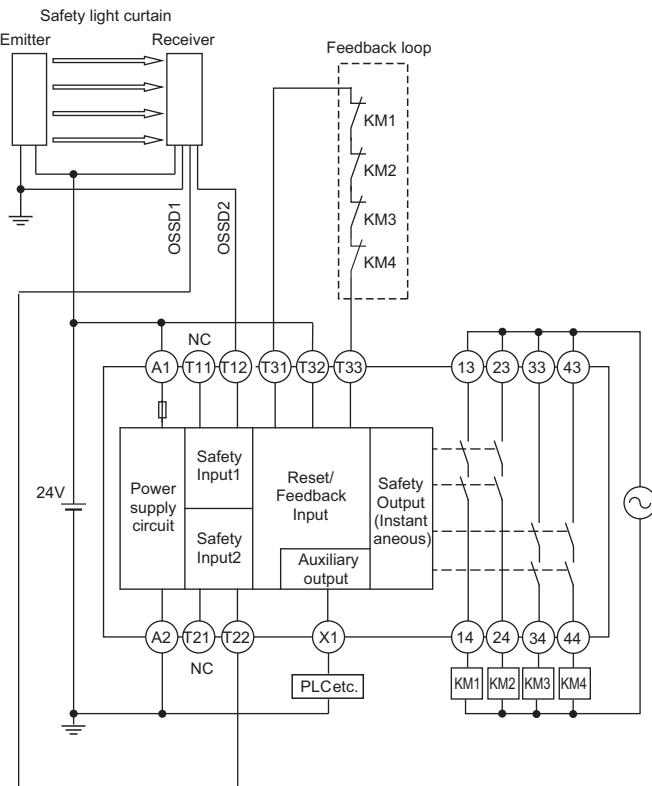

● Timing Chart

 

KM1 to KM4: Magnetic contactor
M1, M2: Motor

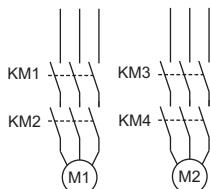


Note: 1. For further information of settings and wiring, refer to the catalog or instruction manual of the connected safety light curtain.
2. Use safety light curtains with PNP control outputs.

| Highest achievable PL/safety category | Model | Stop category | Reset |
|---------------------------------------|---|---------------|--------|
| PLe/4 equivalent | Safety Limit Switch D4B-N/D4N/D4F Guard Lock Safety Door Switch D4SL-N/D4NL/D4JL Safety Relay Unit G9SE-221-T05 | 1 | Manual |


Note: The above PL is only the evaluation result of the example. The PL must be evaluated in an actual application by the customer after confirming the usage conditions.

●Application Overview

- Stop signal input is sent to output a stop command to the motor controller to decelerate the motor M.
- The power supply to the motor M is turned OFF after OFF-delay time.
- After the release of the guard is permitted by the lock release permission signal turned ON, the guard is open by the operation of the lock release switch S4.
- Power supply to the motor M is kept OFF until the closing of the guard is confirmed by the limit switch S1 and guard lock safety-door switch S2, and the reset switch S3 is pressed.

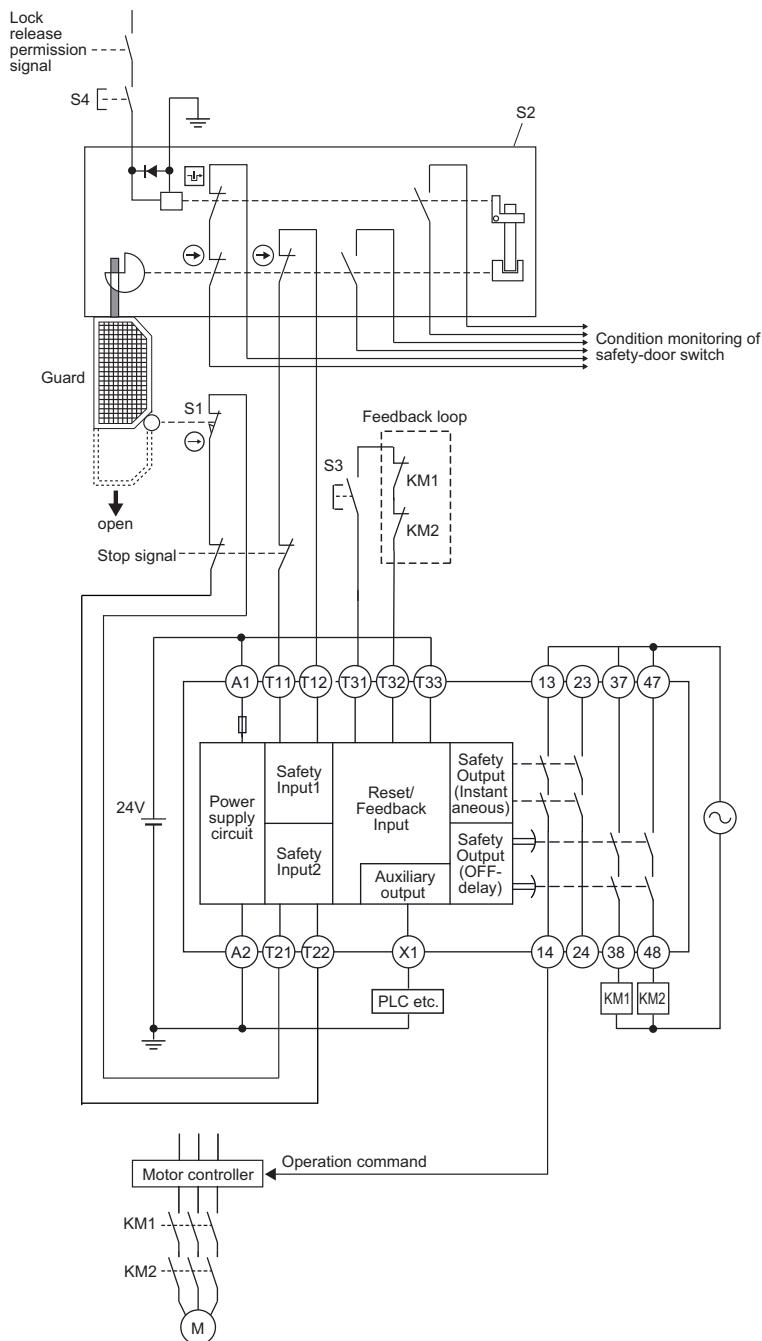

●Timing Chart

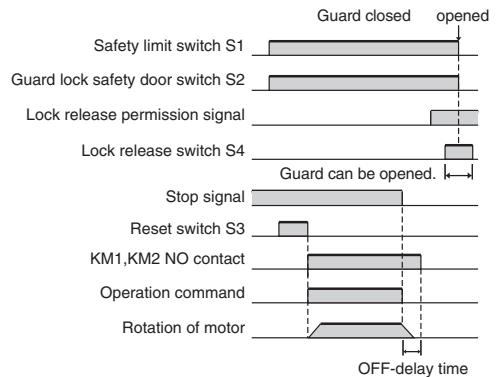

S1: Safety limit switch
 S2: Guard lock safety door switch
 S3: Reset switch
 KM1, KM2: Magnetic contactor
 M: Motor

Note: The lock release enable signal must be configured so that it should turn ON after dangerous movement is stopped and safety is ensured for the door to open.

Safety Precautions

Be sure to read the **Common Precautions for Safety Warning** at the following URL: <http://www.ia.omron.com/>.

Indication and Meaning for Safe Use

| | | |
|---|----------------|--|
|  | WARNING | Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage. |
|  | | Indicates prohibited actions |
|  | | Indicates mandatory actions |

Alert Statements

| | |
|--|--|
|  | WARNING |
| Serious injury may possibly occur due to breakdown of safety outputs. |  |
| Do not connect loads beyond the rated value to the safety outputs. | |
| Serious injury may possibly occur due to loss of required safety functions. |  |
| Wire G9SE properly so that supply voltages or voltages for loads do NOT touch the safety inputs accidentally or unintentionally. | |
| Serious injury may possibly occur due to loss of safety functions. |  |
| Use appropriate devices referring to the information shown below. | |

| Controlling Devices | Requirements |
|--|---|
| Emergency stop switch | Use approved devices with Direct Opening Mechanism complying with IEC/EN 60947-5-1 |
| Door interlocking switch Limit switch | Use approved devices with Direct Opening Mechanism complying with IEC/EN 60947-5-1 and capable of switching micro loads of 24VDC, 5mA. |
| Safety Sensor | Use approved devices complying with the relevant product standards, regulations and rules in the country where it is used. |
| Relay with forcibly guided contacts | Use approved devices with forcibly guided contacts complying with EN 50205. For feedback purpose use devices with contacts capable of switching micro loads of 24VDC, 5mA. |
| Contactor | Use approved devices complying with IEC/EN 60947-4-1 for auxiliary contact linked with power contact (mirror contact). For feedback purpose use devices with contacts capable of switching micro loads of 24VDC, 5mA. |
| Other devices | Evaluate whether devices used are appropriate to satisfy the requirements of safety category level. |

| Precautions for Safe Use |
|--|
| (1) Use G9SE within an enclosure with IP54 protection or higher of IEC/EN60529. |
| (2) When ready for wiring, the power source shall be disconnected the terminals in order to prevent an electrical shock. |
| (3) Do not apply any excessive voltage or current to the input or output circuit the G9SE. Doing so may result in damage to the G9SE or cause a fire. |
| (4) Incorrect wiring may lead to loss of safety function. Wire conductors correctly and verify the operation of G9SE before commissioning the system in which G9SE is incorporated. |
| (5) Do not apply DC voltages exceeding the rated voltages, or AC voltages to G9SE. |
| (6) Use SELV/PELV DC supply satisfying requirements below to prevent electric shock. |
| - DC power supply with double or reinforced insulation, for example, according to IEC/EN60950 or EN50178 or a transformer according to IEC/EN61558. |
| - DC supply satisfies the requirement for class 2 circuits stated in UL 508. |
| (7) The lifetime of G9SE depends on the conditions of switching of its outputs. Be sure to conduct its test operation under actual operating conditions in advance and use it within appropriate switching cycles. Apply protection circuitry against back electromotive force in case connecting inductive loads to safety outputs. |
| (8) Do not operate the G9SE with flammable or explosive gas. An arc with operation and the heat of relay will cause a fire or an explosion. |
| (9) Do not drop G9SE to the ground or dismantle, repair, modify G9SE, otherwise an electric shock may occur or the G9SE may malfunction. It may lead to loss of its safety functions. |
| (10) Use protective device (Fuse etc.) for short-circuit protection and ground fault protection, otherwise a fire may occur or the G9SE may malfunction. |
| (11) Auxiliary monitoring outputs are NOT safety outputs. Do not use auxiliary outputs as any safety output. Such incorrect use causes loss of safety function of G9SE and its relevant system. |
| (12) After installation of G9SE, qualified personnel shall confirm operations and maintenance. The qualified personnel shall be qualified and authorized to secure the safety on each phases of design, installation, running, maintenance and disposal of system. |
| (13) A person in charge, who is familiar to the machine in which G9SE is to be installed, shall conduct and verify the installation. |
| (14) Perform daily and 6-month inspections for the G9SE. Otherwise, the system may fail to work properly, resulting in serious injury. Turn OFF the signal to Safety input and make sure G9SE operates without fault by checking the state of the LED indicator in inspection. |
| (15) Conformity to requirements of performance level is determined as an entire system. It is recommended to consult a certification body regarding assessment of conformity to the required safety level. |
| (16) OMRON shall not be responsible for conformity with any safety standards regarding to customer's entire system. |
| (17) Dispose of the Units according to local ordinances as they apply. |

Precautions for Correct Use

(1) Handle with care

Do not drop G9SE to the ground or expose to excessive vibration or mechanical shocks. G9SE may be damaged and may not function properly.

(2) Adhesion of solvent such as alcohol, thinner, trichloroethane or gasoline on the product should be avoided. Such solvents make the marking on G9SE illegible and cause deterioration of parts.

(3) Conditions of storage

Do not store in such conditions stated below.

1. In direct sunlight

2. At ambient temperatures out of the following ranges:

- Installation: At ambient temperatures out of the range -10 to 55°C

- Storage : At ambient temperatures out of the range -25 to 55°C

3. At relative humidity out of the range of 25% to 85% or under such temperature change that causes condensation.

4. At atmospheric pressure out of the range 86 to 106 kPa.

5. In corrosive or combustible gases

6. With vibration or mechanical shocks out of the rated values.

7. Under splashing of water, oil, chemicals

8. In the atmosphere containing dust, saline or metal powder and other conductive dusts.

G9SE may be damaged and may not function properly.

(4) At least 50 mm above top face of G9SE and below bottom face of G9SE should be available to apply rated current to outputs of G9SE and for enough ventilation.

(5) Mounting multiple units

When mounting multiple units close to each other, the rated current will be 3 A. Do not apply a current higher than 3 A. If the output current is 3 A or more, make sure that there is a minimum distance of 10mm each between all adjacent G9SE units.

(6) DIN rail mounting

Mount G9SE to DIN rails with attachments (TYPE PFP-M, not incorporated to this product), not to drop out of rails by vibration etc. especially when the length of DIN railing is short compared to the widths of G9SE.

(7) Wire correctly according to Wiring.

(8) Use cables with length less than 100 m to connect to Safety Inputs, Feed-back/Reset inputs, respectively.

(9) G9SE may malfunction due to electro-magnetic disturbances. Be sure to connect the negative terminal of DC power supply to ground. When using a DC power supply with light curtains, use DC power supply which has no interruption by a power failure of 20 ms.

(10) This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

(11) Do NOT mix AC load and DC load to be switched in the following terminals.

- G9SE-201 : between 13-14 terminal and 23-24 terminal

- G9SE-401 : between 13-14 terminal and 23-24 terminal,

33-34 terminal and 43-44 terminal

- G9SE-221-T□ : between 13-14 terminal and 23-24 terminal,

37-38 terminal and 47-48 terminal

(12) Start entire system after more than 2s have passed since applying supply voltage to G9SE.

(13) Set the time duration of OFF-delay (Type G9SE-221-T□)

1. Set the time duration of OFF-delay to an appropriate value that does not cause the loss of safety function of system.

2. Set both of the two O on the front and back, to the same value. When setting the de After setting, make sure G9SE operating time is correct.

(14) To determine safety distance to hazards, take into account the delay of Safety outputs caused by the following time:

1. Response time


2. Preset off-delay time and accuracy of off-delay time

(15) Before G9SE outputs become in ON-state, non-regular self-diagnosis for Safety output circuit may be executed.

On this occasion, the operating noise of internal relays occurs.

(16) In the place subjected to strong vibration or shock, mount G9SE to a mounting surface with screws and the screw mounting attachment.

Otherwise, G9SE may not function properly due to vibration or mechanical shocks out of the rated values caused by sympathetic vibration of G9SE and the mounting parts, and so on.

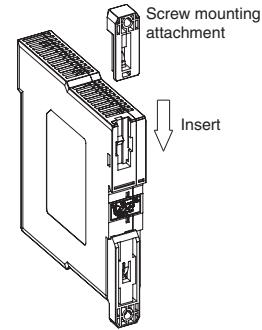

Wiring

Use the following to wire to G9SE.

- Solid wire: AWG24 to AWG16 (0.25 to 1.5 mm²)
- Stranded wire: AWG24 to AWG16 (0.25 to 1.5 mm²)
- Strip the cover of wire no longer than 8 to 10 mm

When using stranded wire, insulated ferrule should be used. Use below insulated ferrule.


When using ferrule, G9SE is suitable for Factory Wiring Only. When using G9SE as a "UL Listed" product for Field Wiring, do not use ferrule but insert the strand or solid wire (CU only) directly into the holes on the terminal block.

- Insulated ferrule: AWG24 to AWG16 (0.25 to 1.5 mm²)
- Crimp height(H): 2.0 mm max
- Width(W): 2.7 mm max.

Conductor length: 8 to 10 mm

■ Recommended insulated ferrule: manufactured by Phoenix contact


| Type | Wire size | |
|--------------|----------------------------------|-----|
| | Cross section (mm ²) | AWG |
| Single | 0,34 | 22 |
| AI 0,5-10WH | 0,5 | 20 |
| AI 0,75-10GY | 0,75 | 18 |
| AI 1-10RD | 1,0 | 18 |
| AI 1,5-10BK | 1,5 | 16 |
| Twin | 2 x 0,75 | — |

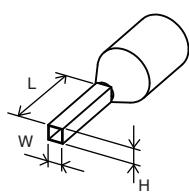

How to insert solid wire and insulated ferrule

The wire should be pushed into the terminal block straight. No need to use the driver.


After inserting, make sure wire is fastened on to terminal block.

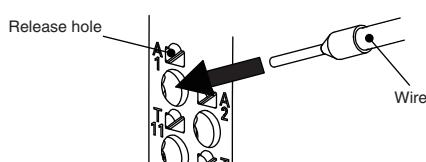

How to release wire

Use the following minus drive to release wire from terminal block. And When releasing wire, the power source should be disconnected

1. Push the driver lightly into the taper of release hole.
2. Pull out the wire while the driver is pushed into release hole.
3. Pull out the driver.

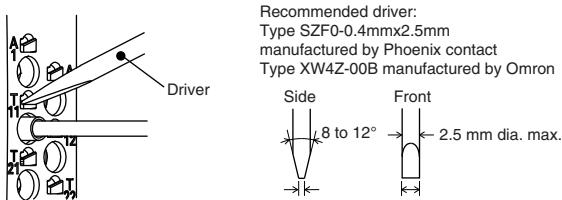

Precautions for Correct wiring

Terminal block may be damaged.

1. Not push the driver into the release hole straight.
2. Not push the driver into the release hole by force of 30N and over.
3. Not tip or twist the driver pushed into release hole.

Standards

Certified Standards

EN ISO13849-1: 2015 PL e Safety Category 4,
IEC/EN 60947-5-1, IEC/EN 62061 SIL3,
EN 81-1, EN81-2, EN 81-20, EN 81-50
UL508, CAN/CSA C22.2 No.14
GB/T 14048.5

Safety category

G9SE Safety Relay Units can be applied to PLe/Safety Category 4. The above is provided according to circuit examples presented by OMRON. Therefore, the above may not apply to all operating environments.

The applicable safety category is determined from the whole safety control system. Make sure that the whole safety control system meets ISO 13849-1 requirements.

Performance level and safety category

(EN ISO13849-1)

- (1) Input the signals to both of the Safety inputs (T12 and T22)
- (2) Input a signal to the Safety inputs (T11-T12 and T21-T22) through switches with Direct Opening Mechanism. When using limit switches, at least one of them must have Direct Opening Mechanism.
- (3) And wiring must be done in a way that a short circuit between the wires of Safety input can be prevented.
- (4) When connecting Safety sensor with G9SE, use TYPE 4 safety sensor.
- (5) Be sure to connect the negative terminal of DC power supply to ground.
- (6) Use two Safety outputs (e.g. 13-14 and 23-24) to construct the system.
- (7) In order to ensure sufficient failure detection, it is mandatory to use G9SE only together with contactors or relays with forcibly guided contacts.
- (8) Input the signal through NC contacts of the contactors to Feedback/Reset input (T31-T32 for manual reset or T31-T33 for auto reset). (Refer to 'Application Examples')